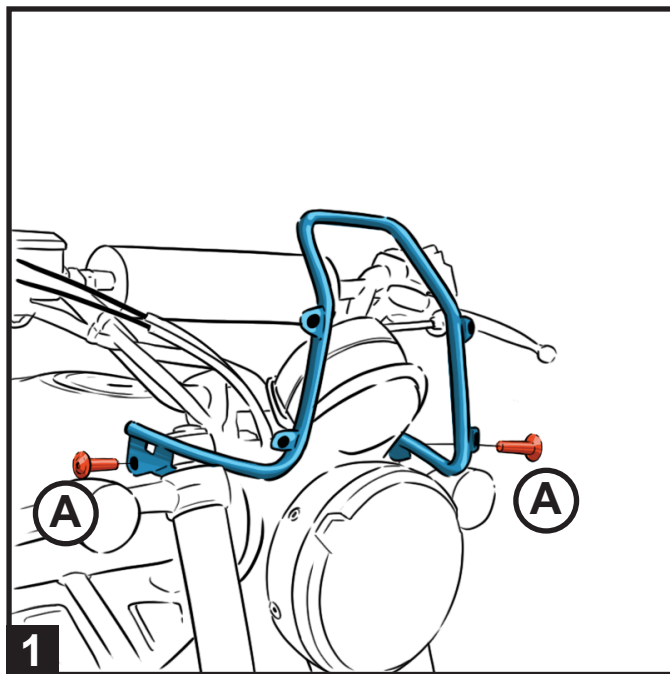
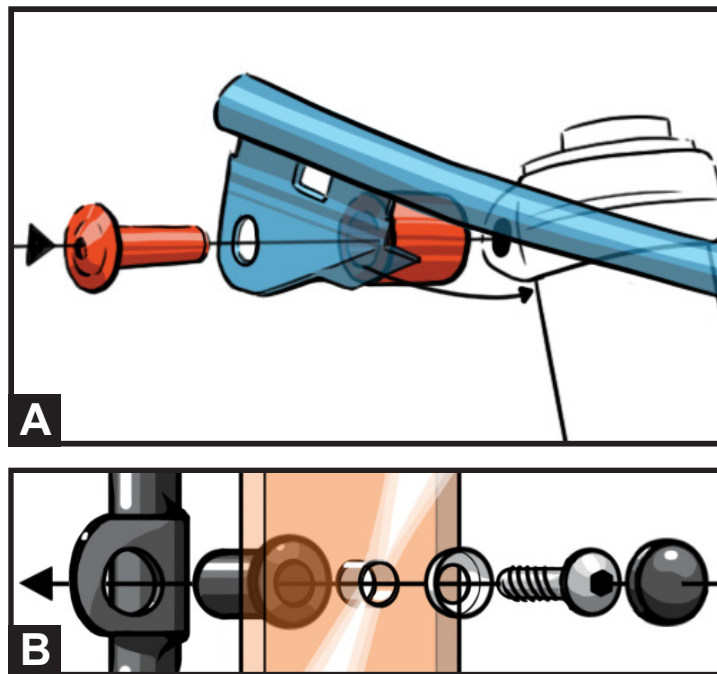


**ATTENZIONE!**Leggere attentamente il foglio '*Informazioni importanti*' prima di procedere.**WARNING!**Carefully read the '*Important informations*' sheet before starting.**EN**_Remove the two screws securing the motorcycle's upper fork clamp.

Position the frame on the motorcycle and use the M8 screws to fasten it, placing the provided bushings from the kit between the triple clamp and the frame.

To attach the fairing to the tubular support, use the four Wellnuts following diagram B.

**IT**_Rimuovere le 2 viti che serrano la piastra forcella superiore della moto.

Posizionare il telaio sulla moto e utilizzare le viti M8 per fissarlo interponendo le bocche fornite nel kit fra piastra e telaio.

Per il fissaggio del cupolino sul supporto in tubo usare i 4 Wellnuts seguendo lo schema B.

