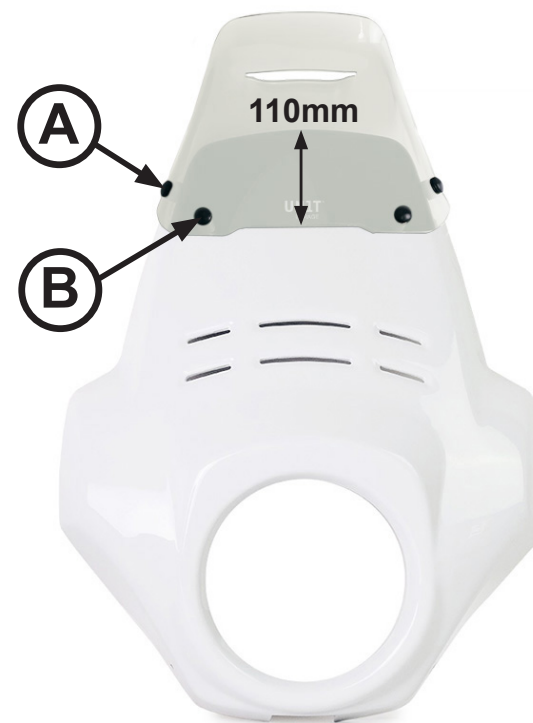
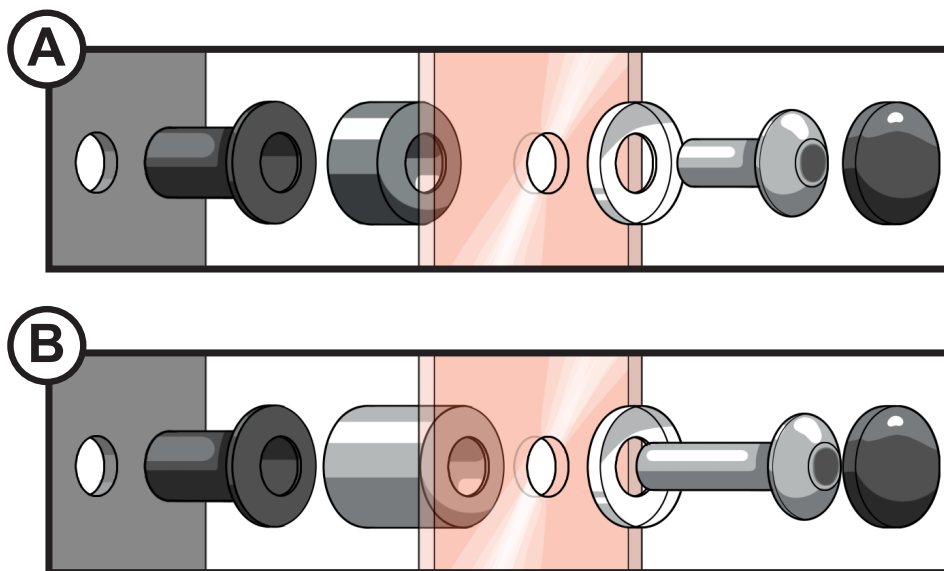


**ATTENZIONE!**Leggere attentamente il foglio '*Informazioni importanti*' prima di procedere.**WARNING!**Carefully read the '*Important informations*' sheet before starting.

EN_ Overlay the windscreen extension in position onto the windscreen mounted on the motorcycle and carefully mark the reference points for the four holes to be drilled in the windscreen itself.

Drill the four holes using an 8 mm drill bit.

For each of the four holes insert: screw, plastic washer, and spacer as shown, following diagrams A and B.

To complete the installation, cover the screw heads with the black plastic caps.

IT_ Sovrapporre in posizione l'estensione del cupolino al cupolino montato sulla moto e segnare con cura i riferimenti per i quattro fori da eseguire sul cupolino stesso. Eseguire i quattro fori con una punta 8mm.

Per ognuno dei quattro fori inserire: vite, sottovite in plastica e spessore come illustrat, seguendo i diagrammi A e B. Per concludere il montaggio, coprire le teste delle viti con i tappini in plastica neri.