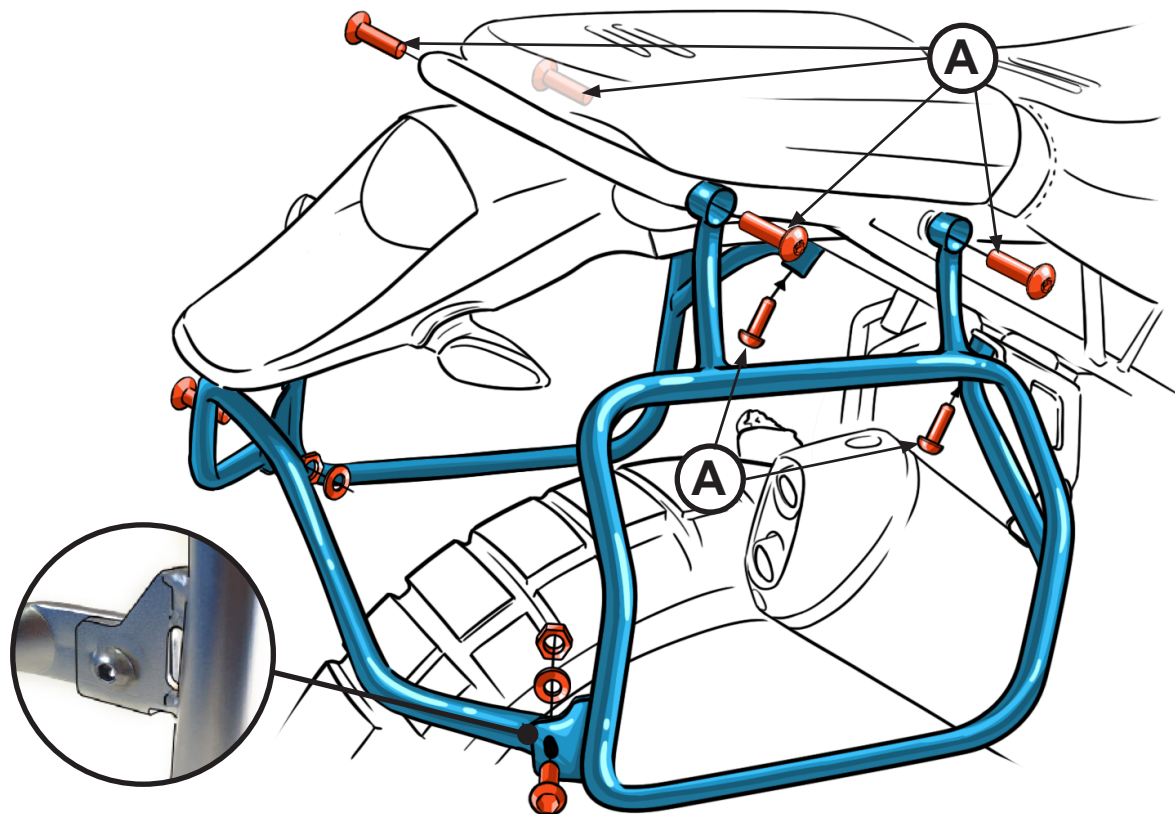


**ATTENZIONE!**Leggere attentamente il foglio '*Informazioni importanti*' prima di procedere.**WARNING!**Carefully read the '*Important informations*' sheet before starting.

**EN** When assembling the frame, it is important to tighten the screws only once all parts are assembled. Start by inserting the screws without tightening.

Position the frames on the bike as shown in the scheme and secure in A using M8x25 screws supplied in the kit.

Now fit the crossbar using the M8x16 and locknut with washer on the inside. The correct orientation of the crossbar can be seen in detail. Then tight all the screws.

**IT** Quando si monta il telaio, è importante serrare le viti solo una volta che tutte le parti sono assemblate. Inizia inserendo le viti senza stringere.

Posizionare i telai sulla moto come mostrato in figura e fissarli in A con le viti M8x25 fornite nel kit.

Montare anche il traversino rivolto verso l'alto, e all'interno dei telai (vedi dettaglio) utilizzando due M8x16, con rondella e dado autobloccante. Infine stringere tutto.

