




ATTENZIONE!

Leggere attentamente il foglio '*Informazioni importanti*' prima di procedere.

WARNING!

Carefully read the '*Important informations*' sheet before starting.

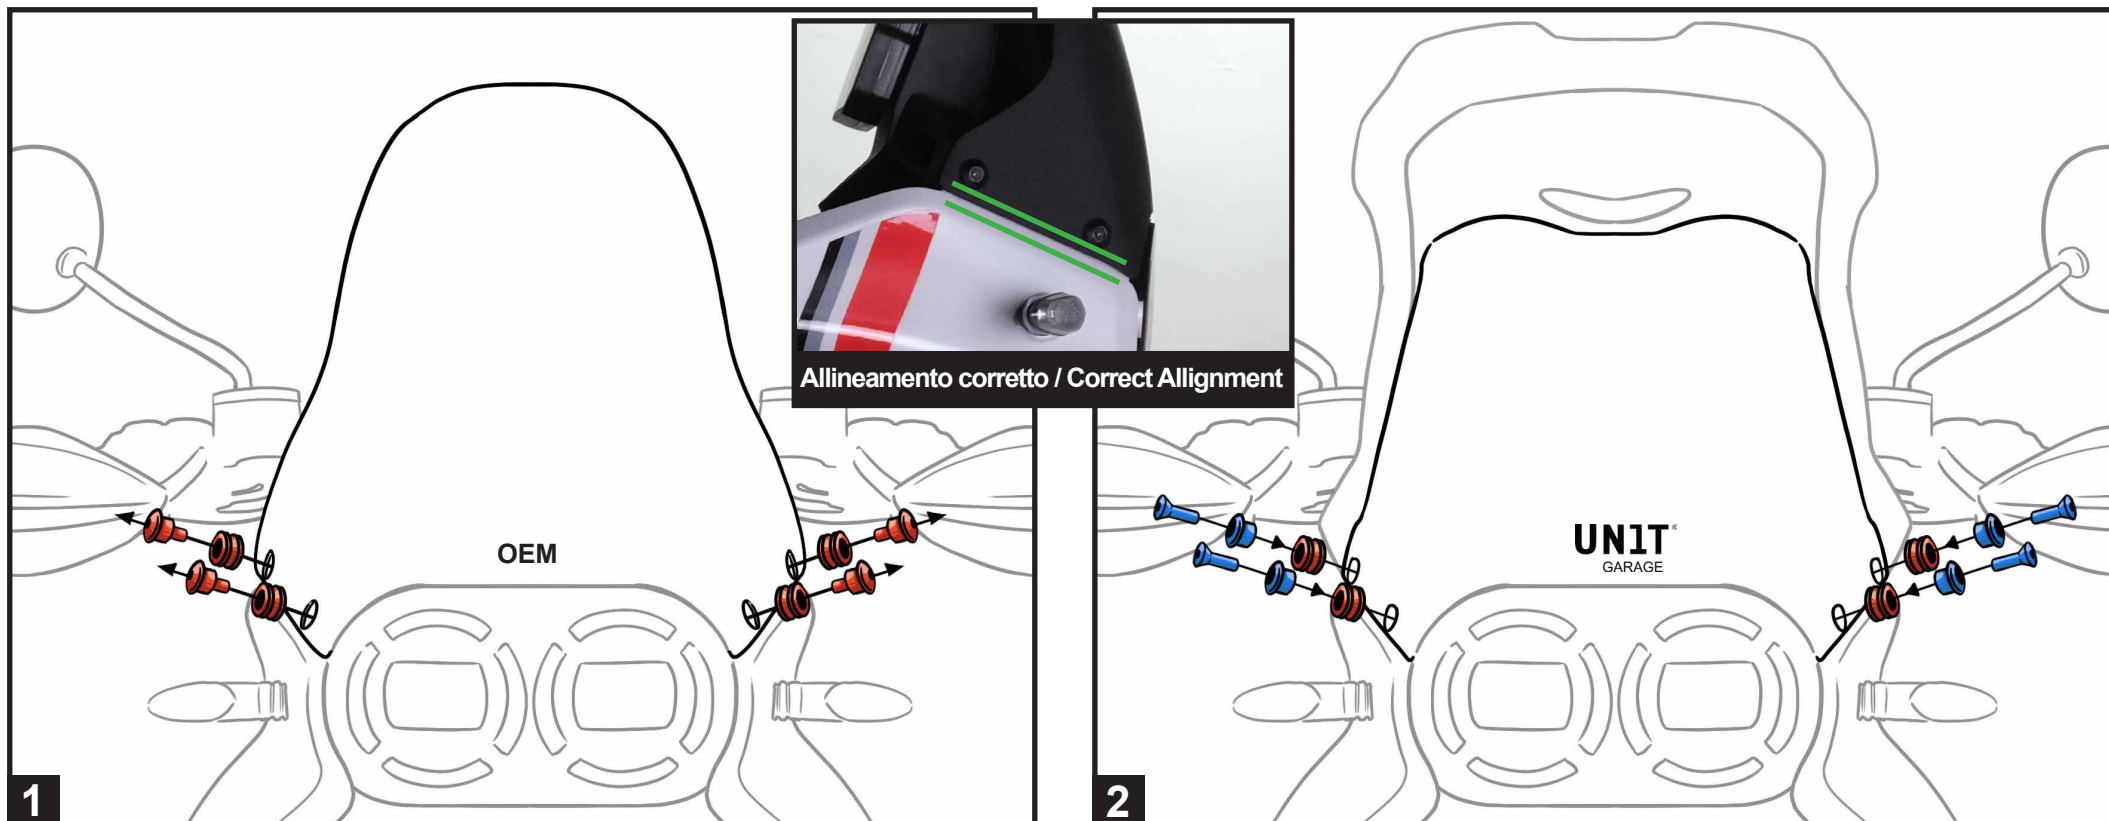

EN_ Disassemble the original windshield by removing the 4 screws and the rubber bushings. Mount the 4 rubber bushings on the Unit Garage windshield, then position the windshield on the motorcycle, and using the 4 bushings and the 4 countersunk screws supplied in the kit, fix the windshield to the motorcycle, being careful to tighten the screws only after having positioned them all in their place. We also suggest checking the alignment of the windshield with the fairing: the windshield is fixed on 4 clips, therefore it is sufficient to apply a slight pressure to keep the windshield in the correct position while tightening the screws.

WARNING: do not use the original screws to mount the Unit Garage fairing!

IT_ Smontare il cupolino originale rimuovendo le 4 viti e i gommini. Montare i 4 gommini sul cupolino Unit Garage, poi posizionare il cupolino sulla moto, e utilizzando le 4 bocchette e le 4 viti a testa svasata fornite nel kit, fissare il cupolino alla moto, facendo attenzione a stringere le viti soltanto dopo averle posizionate tutte nella loro sede. Inoltre suggeriamo di controllare l'allineamento del cupolino con la carena: il fissaggio del cupolino è su 4 clip, è dunque sufficiente applicare una leggera pressione per tenere il cupolino in posizione corretta mentre si stringono le viti.

ATTENZIONE: non utilizzare le viti originali per montare il cupolino Unit Garage!

