




ATTENZIONE!

Leggere attentamente il foglio *'Informazioni importanti'* prima di procedere.

WARNING!

Carefully read the *'Important informations'* sheet before starting.

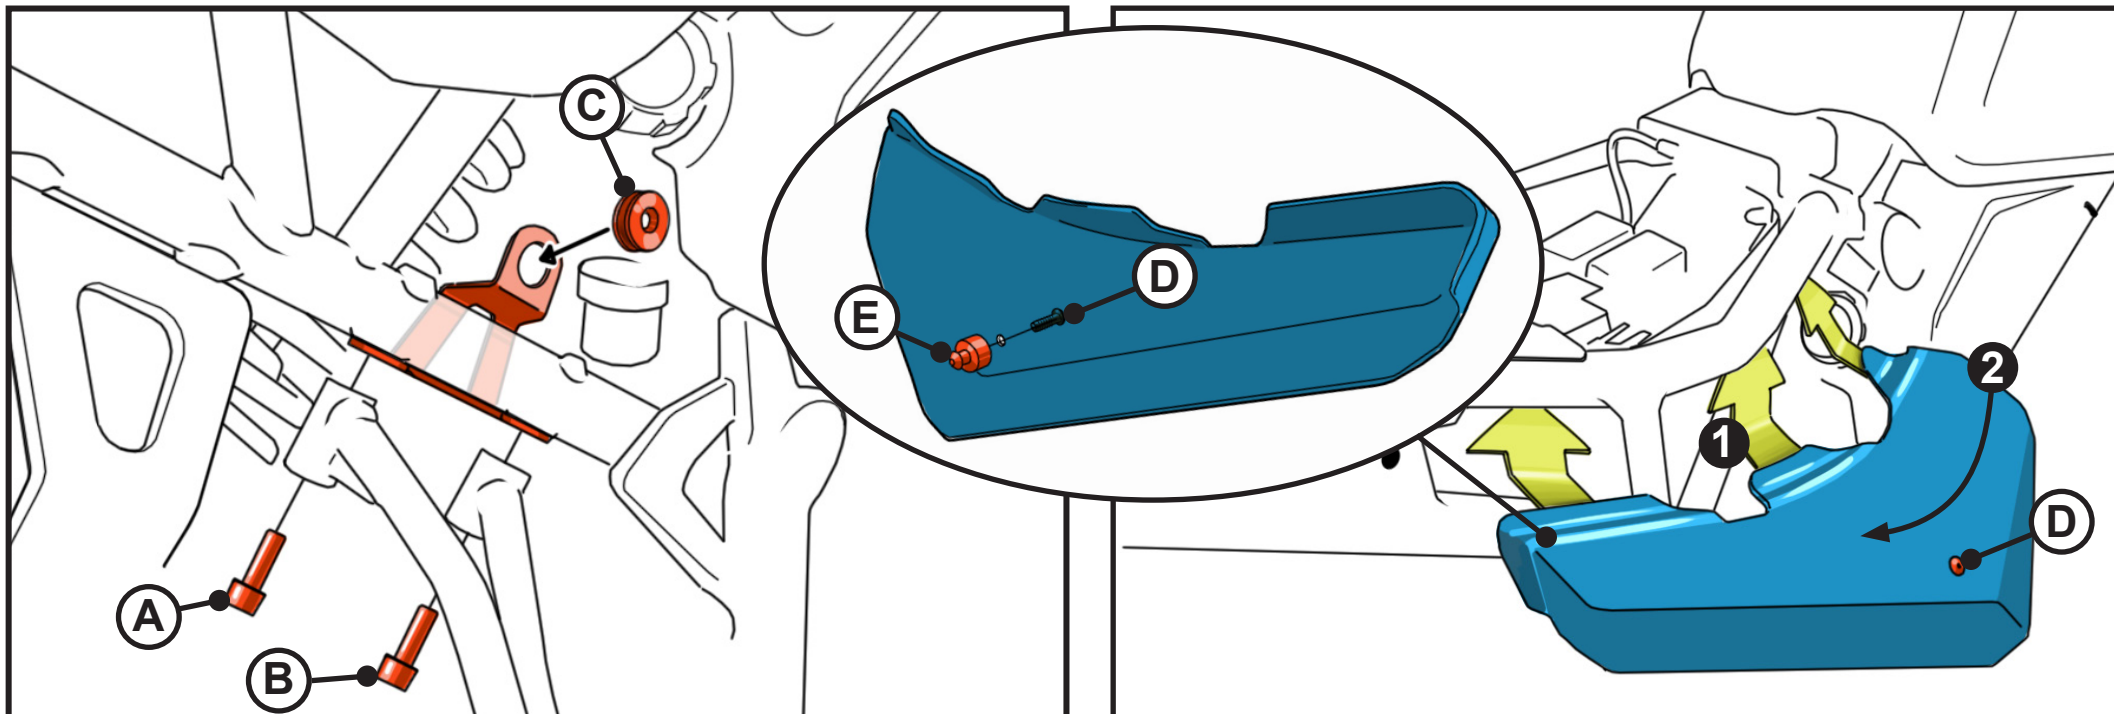

EN_ The Unit Garage side panels can be installed and removed at any time without tools, in order to access the preload knob (right side) or the key hole (left side); however, for the first assembly it is recommended to remove the seat from the bike.

The support bracket for the side panels are fitted between the frame and the passenger foot pegs. Remove the original screws A and B from the bike, fit the bracket, reassemble the foot pegs, and tighten the screws (24 Nm) insert the rubber bushing into the bracket.

From the internal side of the side panel, position the aluminium pin E supplied in the kit and fix it using the M5 screw. **IMPORTANT:** lubricate the pin E with some grease (for example Vaseline grease) to facilitate the assembly/disassembly of the side panel on the bike.

FITTING:

1. Slide the side panel underneath the frame tube as indicated in image (1)
2. Then push down to fix the aluminium pin into the grommet (2).
3. To remove the side panel, simply invert the steps. (as said, the side panel can also be removed with the seat installed).

IT_I fianchetti Unit Garage possono essere installati e rimossi in qualsiasi momento senza attrezzi, per accedere alla manopola di precarico (lato destro) o alla apertura sella (lato sinistro); tuttavia per il primo montaggio si consiglia di rimuovere la sella dalla moto.

Tra il telaio e le pedane passeggero vanno inserite le staffe di supporto dei fianchetti. Rimuovere le viti originali A e B dalla moto, montare la staffa, rimontare le pedane e serrare le viti (24 Nm), poi inserire la boccola in gomma nella staffa.

Nel lato interno del fianchetto, posizionare il perno in alluminio E fornito nel kit e fissarlo con la vite M5. **IMPORTANTE:** lubrificare il perno E con del grasso (ad esempio grasso di vaselina) per facilitare il montaggio/smontaggio del fianchetto sulla moto.

MONTAGGIO:

1. Far scorrere il pannello laterale sotto il tubo del telaio come indicato nell'immagine (1)
2. Quindi spingere verso il basso per fissare il perno in alluminio nel gommino (2).
3. Per rimuovere il pannello laterale è sufficiente fare l'inverso. (come anticipato, il pannello laterale può essere rimosso anche con la sella installata).

