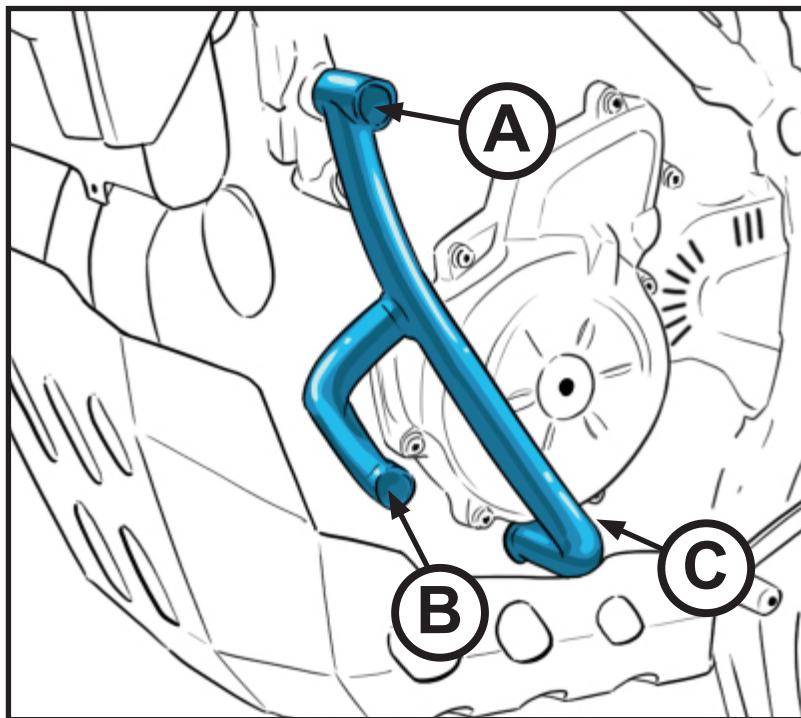


**ATTENZIONE!**Leggere attentamente il foglio *'Informazioni importanti'* prima di procedere.**WARNING!**Carefully read the *'Important informations'* sheet before starting.

EN_ When installing the bars, it is important to tighten the screws only after all the parts have been assembled. Start by inserting the screws without tightening them.

Begin by positioning the bars on the motorcycle and secure them as follows:

LEFT SIDE:

A - M10x30

B - M10x30


C - M10x65 + M10 washer + spacer (included in the kit)

RIGHT SIDE:

A - M10x30

B - M10x30

C - M10x30

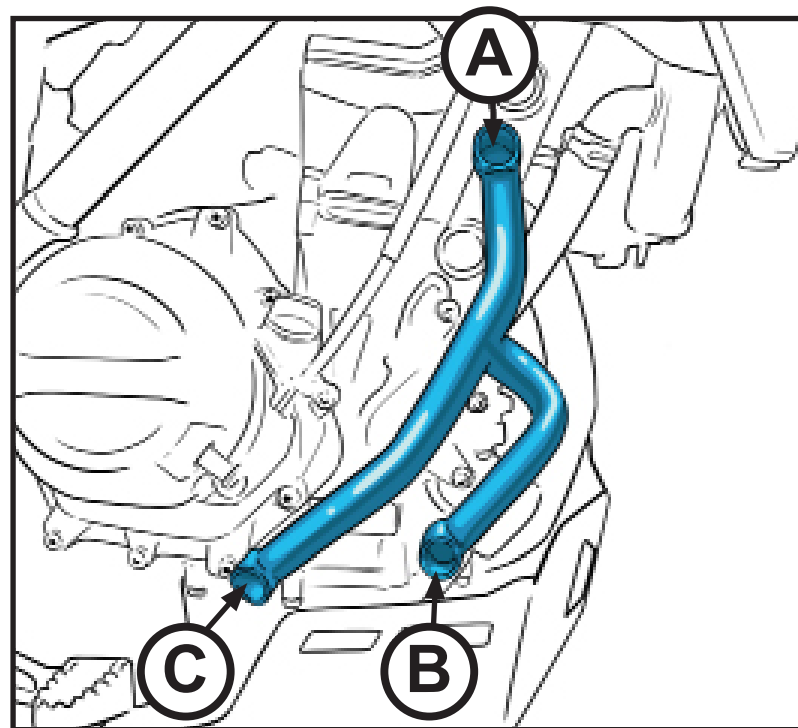

IT_ Quando si montano le barre, è importante serrare le viti solo una volta che tutte le parti sono assemblate. Inizia inserendo le viti senza stringere.

Iniziare posizionando le barre sulla moto e fissarle come segue:

LATO SINISTRO:

A - M10x30

B - M10x30

C - M10x65 + rondella M10 + spessore (fornito in kit)

LATO DESTRO:

A - M10x30

B - M10x30

C - M10x30

