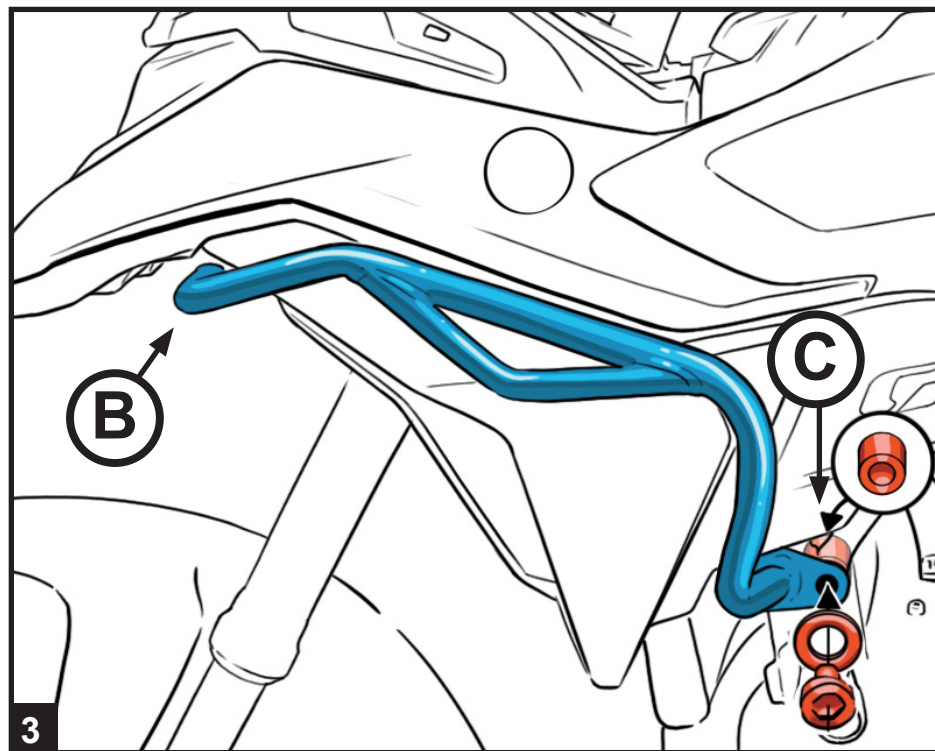
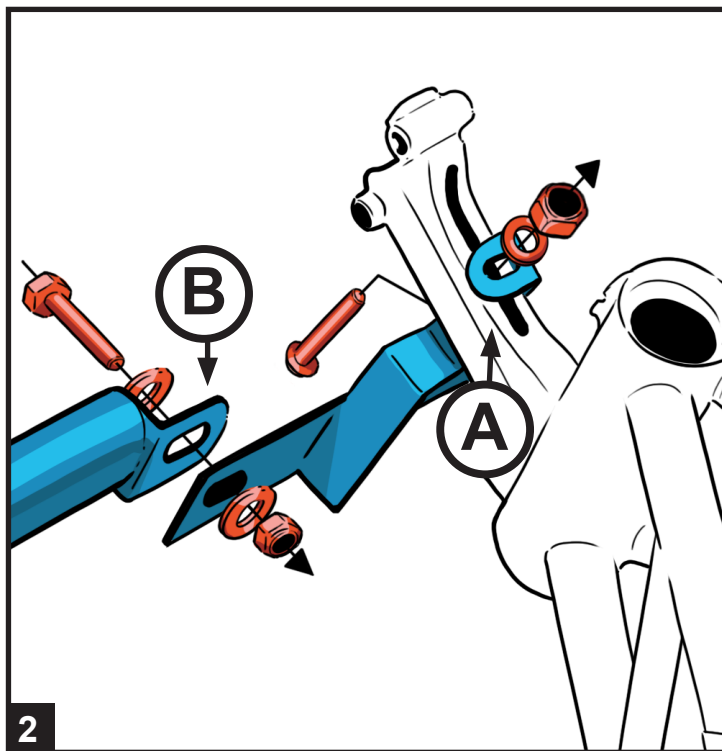
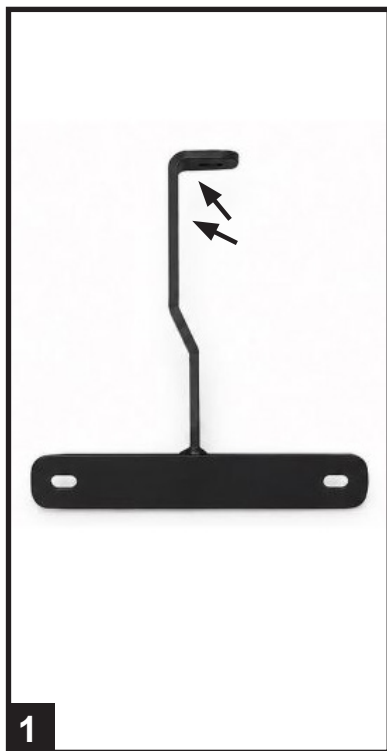


**ATTENZIONE!**Leggere attentamente il foglio *'Informazioni importanti'* prima di procedere.**WARNING!**Carefully read the *'Important informations'* sheet before starting.

EN_ When installing the bars, it is important to tighten the screws only after all the parts have been assembled. Start by inserting the screws without tightening them.

Prepare the bracket supplied in the kit by applying the protective adhesive where indicated by the arrows in detail 1. Then position the bracket on the motorcycle frame (Fig. 2) and secure it to the motorcycle at point A using an M8x55 screw, washer, and nut (do not tighten the screw!).

Now position the bars (Fig. 3) and secure them at point B using M8x22 screws, washers, and nuts, and at point C using M12x90 screws and washers.

Finally, once everything has been correctly positioned, gradually tighten all the screws, a little at a time.

IT_ Quando si montano le barre, è importante serrare le viti solo una volta che tutte le parti sono assemblate. Inizia inserendo le viti senza stringere.

Preparare la staffa fornita nel kit, applicando l'adesivo protettivo dove indicato dalle frecce nel dettaglio 1; dunque posizionare la staffa sul telaio della moto (fig.2) e fissarla alla moto (A) con una vite M8x55, rondella e dado (non serrare la vite!).

Ora posizionare le barre (fig.3) e fissarle in B utilizzando le viti M8x22, con rondelle e dadi, e in C utilizzando le viti M12x90 con rondelle.

Infine, dopo aver posizionato correttamente il tutto, stringere un po' alla volta tutte le viti.

