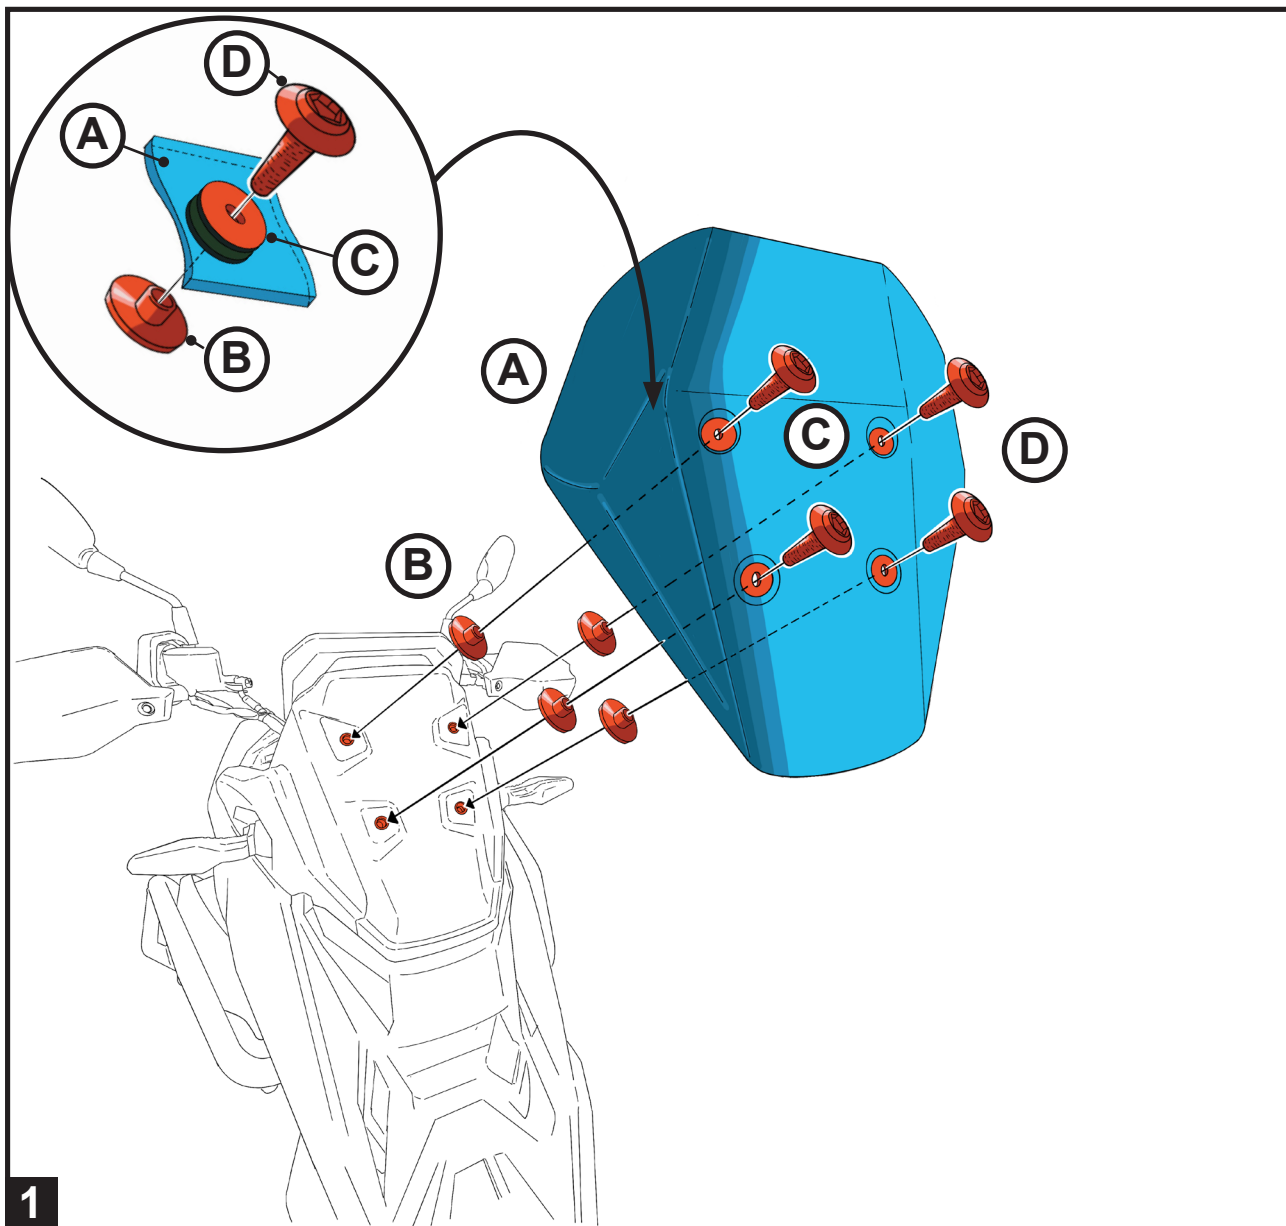


**ATTENZIONE!**Leggere attentamente il foglio '*Informazioni importanti*' prima di procedere.**WARNING!**Carefully read the '*Important informations*' sheet before starting.

EN_

1 - Start by removing the original BMW windscreen by unscrewing the 4 original screws.

2 - Insert the 4 black rubber grommets **C** into the screw holes of the Sport/Caponord Unit Garage windshield **A**. Then insert the 4 flanged bushings **B**, supplied with the Unit Garage kit, into the holes in the rubber grommets **C**. Position the Sport/Caponord Unit Garage windshield **A** and secure it using the four Unit Garage screws **D**.

IT_

1 - Iniziare rimuovendo il cupolino originale BMW, svitando le quattro viti originali.

2 - Inserire i 4 gommini neri **C** nei 4 fori per le viti del cupolino Sport/Caponord Unit Garage **A**. Inserire quindi le 4 boccole flangiate **B**, fornite nel kit Unit Garage, nei 4 fori dei gommini **C**. Posizionare il cupolino Sport/Caponord Unit Garage **A** e fissarlo utilizzando le 4 viti Unit Garage **D**.

