





ATTENZIONE!

Leggere attentamente il foglio *'Informazioni importanti'* prima di procedere.

WARNING!

Carefully read the *'Important informations'* sheet before starting.

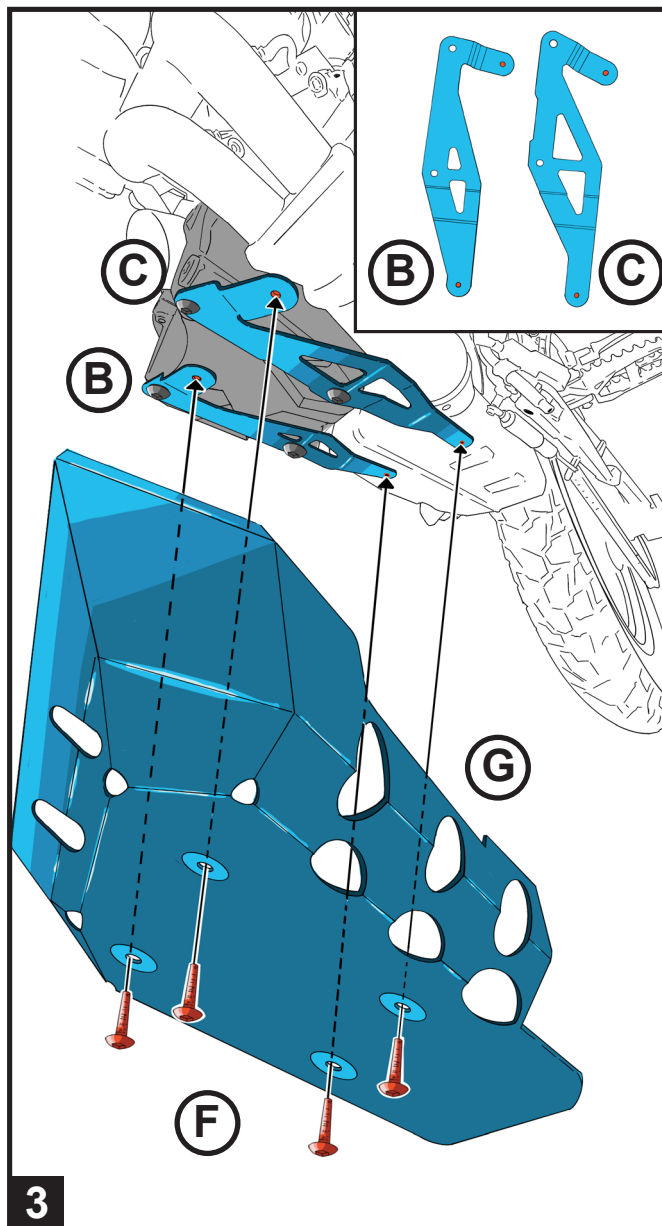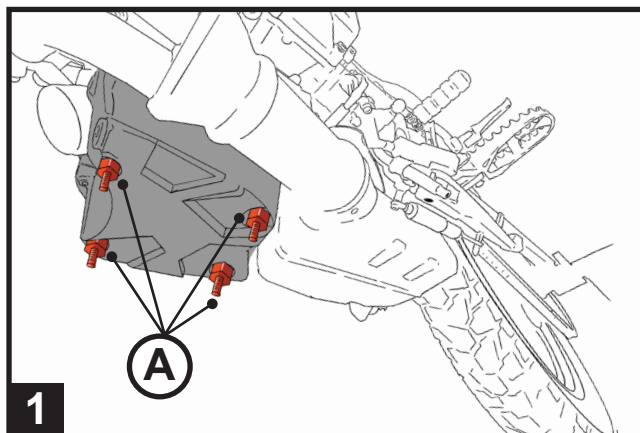

EN_

1 - Start by removing the original engine protection plate, unscrewing the 4 M8 nuts located underneath the guard. Then, remove the 4 silent blocks **A** using a 21mm spark plug wrench.

2 - To fit brackets **B** and **C**, included in the Unit Garage kit, as shown in figure 2, position the 4 bushings **E** in place of the 4 original silent blocks you just removed. Then fit brackets **B** and **C** using the 4 screws and 4 washers M6 **D**.

WARNING: brackets B and C are not identical, position them correctly as shown in drawing 2.

3 - Attach the Unit Garage engine guard **G** to the brackets using the 4 screws **F** supplied in the kit.

IT_

1 - Iniziare rimuovendo la protezione paramotore originale, svitando i 4 dadi M8 situati sotto la protezione. Successivamente, rimuovere i 4 silent block **A** con una chiave per candela n°21.

2 - Per montare le staffe **B** e **C** presenti nel kit Unit Garage, come in figura 2, posizionare al posto dei 4 silent block originali appena rimossi le 4 boccole **E**. Montare quindi le staffe **B** e **C** con le 4 viti e le 4 rondelle **D**.

ATTENZIONE: le due staffe B e C non sono uguali, posizionarle correttamente come indicato nel disegno 2.

3 - Fissare alle staffe **B** e **C** la protezione paramotore **G** di Unit Garage con le 4 viti M6 **F** fornite nel kit.

