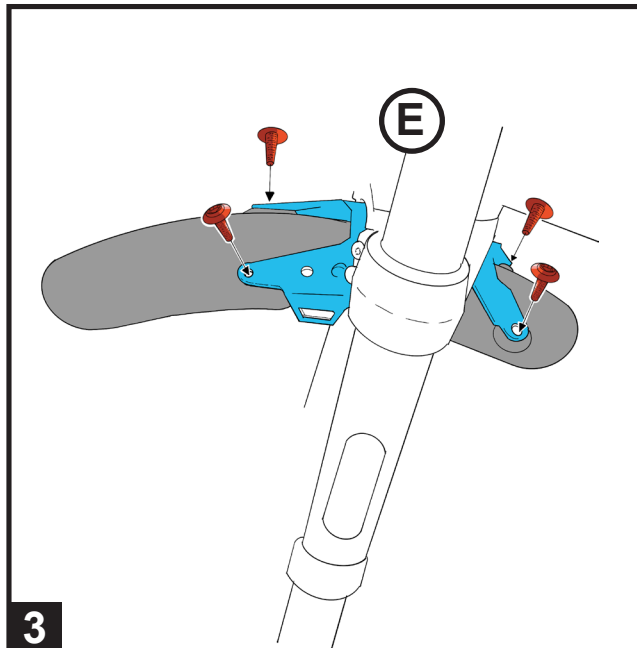
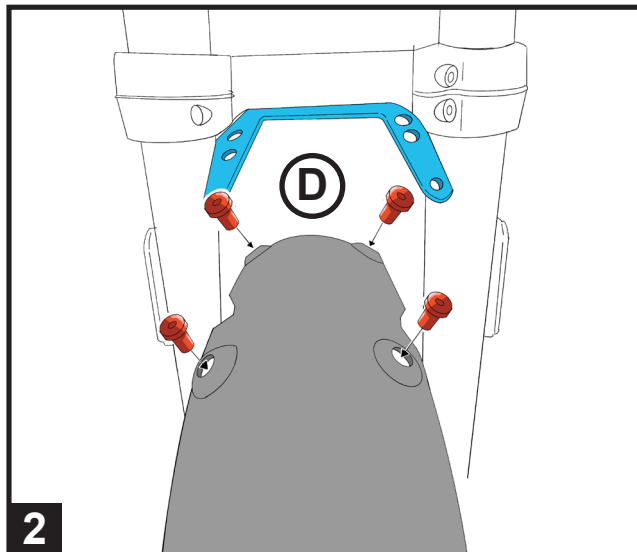
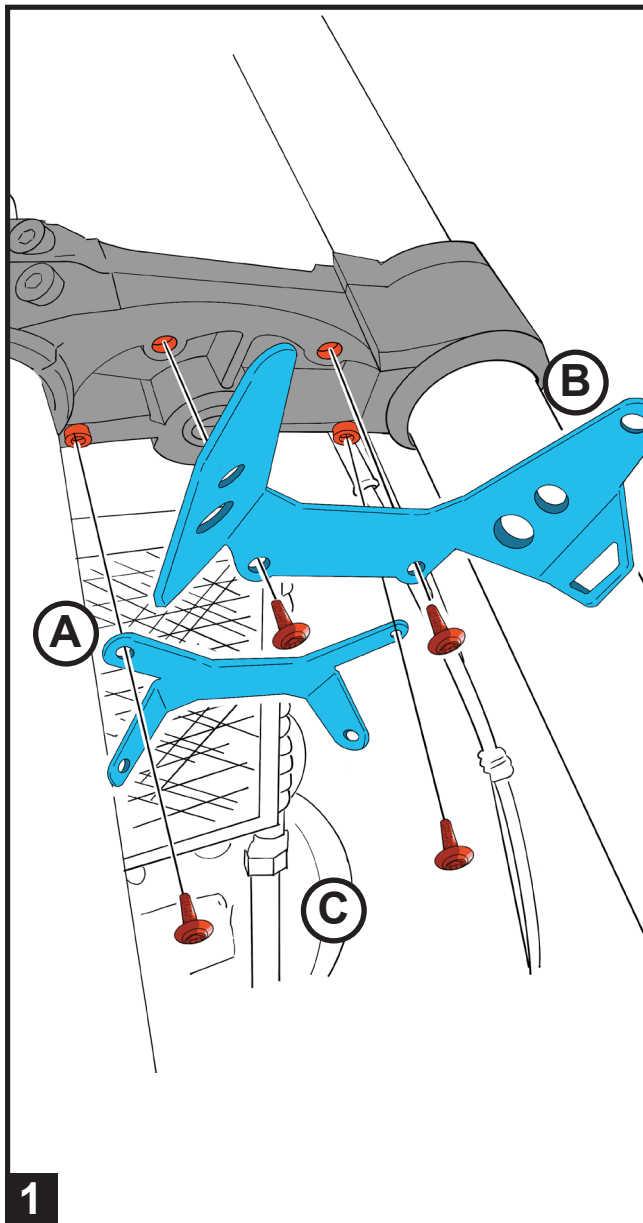


**ATTENZIONE!**Leggere attentamente il foglio *'Informazioni importanti'* prima di procedere.**WARNING!**Carefully read the *'Important informations'* sheet before starting.**EN_**

1 – Remove the original front fender. Secure the Unit Garage brackets **A** and **B** using the 4 **C** screws supplied with the kit (Figure 1).

2 – Insert the 4 **D** well nuts supplied with the Unit Garage kit into the screw holes of the original fender (Figure 2).

3 – Secure the original fender to the Unit Garage brackets **A** and **B** using the 4 screws supplied with the kit. **Important: tighten the 4 screws E only after all 4 screws have been inserted.**

To secure the fork protectors, use the 4 M6 nuts supplied with the Unit Garage kit.

IT_

1 – Smontare il parafango anteriore originale. Fissare le 2 staffe **A** e **B** Unit Garage con le 4 **C** viti fornite nel kit (figura 1).

2 – Inserire nei fori per le viti del parafango originale i 4 wellnut **D** contenuti nel kit Unit Garage (figura 2).

3 – Fissare il parafango originale alle staffe **A** e **B** Unit Garage con le 4 viti fornite nel kit. **Importante: serrare le 4 viti E solo dopo averle inserite tutte e 4.**

Per il fissaggio delle protezioni della forcella, utilizzare i 4 dadi M6 forniti nel kit Unit Garage.

