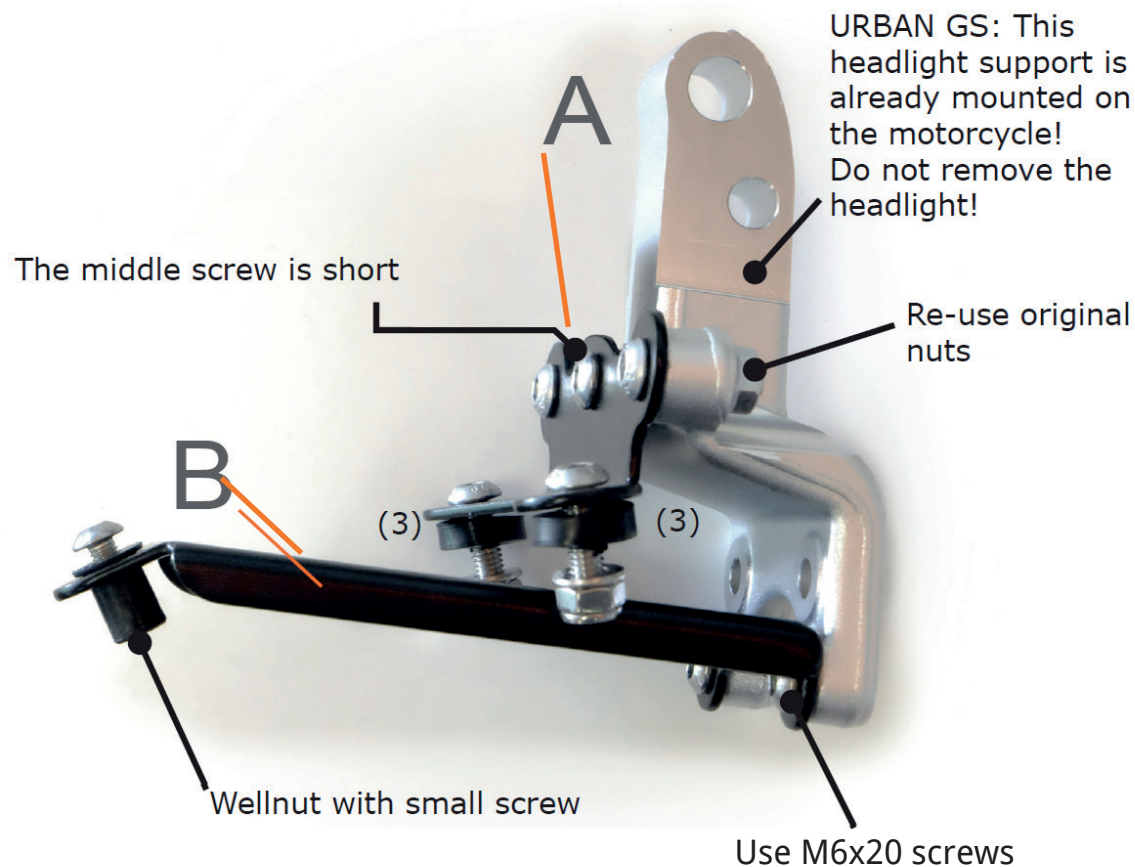


**ATTENZIONE!**Leggere attentamente il foglio '*Informazioni importanti*' prima di procedere.**WARNING!**Carefully read the '*Important informations*' sheet before starting.

EN_To make sure everything lines up perfectly, follow the instructions, keeping all screws loose. Only when everything is mounted will all screws be tightened.

Fix bracket A to the headlight support of your motorcycle using the 3 included screws and 2 original nuts (the short screw goes in the middle).

Mount the front fender onto bracket A, keeping the rubber spacers (3) between bracket A and the front fender. As a last step, mount the support bracket B underneath the front fender using the 2 M6x20 screws and the small screw M4 with wellnut. Now position everything and tighten all screws.

Finish by tightening all screws.

IT_Per assicurarsi che tutto si allinei perfettamente, seguire le istruzioni riportate di seguito, mantenendo tutte le viti lente. Solo a montaggio ultimato serrare tutte le viti.

Fissare la staffa A al supporto del faro della moto usando le 3 viti incluse e 2 dadi originali (la vite più corta va al centro).

Montare il parafango anteriore sulla staffa A, tenendo i distanziali in gomma (3) tra la staffa A e il parafango anteriore. Ora montare la staffa di supporto B sotto il parafango anteriore usando le 2 viti M6x20 e la vite M4 più lunga.

A lavoro ultimato posizionare tutto correttamente e stringere tutte le viti.

