




ATTENZIONE!
Leggere attentamente il foglio 'Informazioni importanti' prima di procedere.
WARNING!
Carefully read the 'Important informations' sheet before starting.

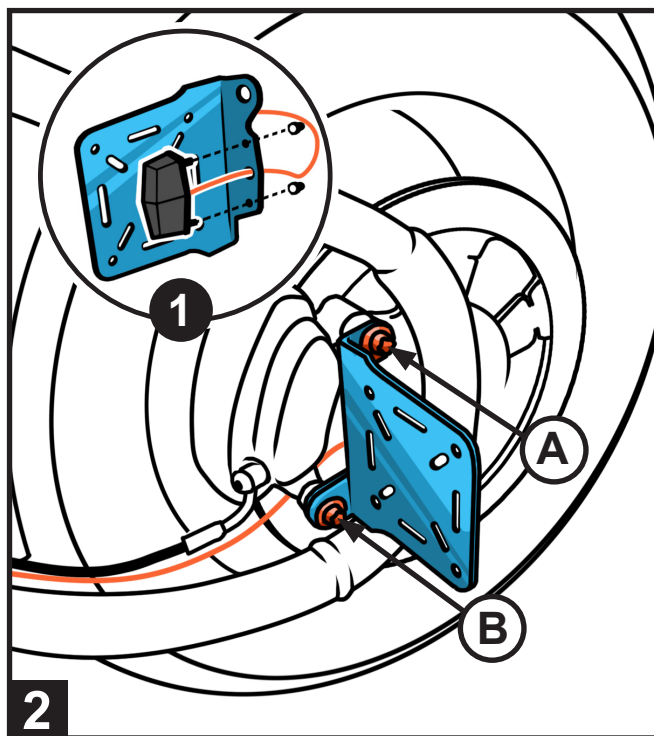




EN_Insert the license plate light into the bracket as shown in fig. 1, passing the cable through the central hole, then fasten it using the two cap nuts supplied in the kit. Remove the screws A and B that support the brake calliper, and use them to fix the bracket to the bike; then pass the license plate light cable along the brake line and secure it with zip ties.

Fig. 3 indicates the OEM power plug (C). Use the supplied splice connector to connect the GRAY and BLACK cables coming from the license plate light with the motorcycle wiring. (important, make the connection AFTER the plug, and leave a couple of cm of cable from the connector.)

If your motorcycle is equipped with the Unitgarage Tail Tidy Kit, follow fig. 4, if your bike is in the original configuration, follow fig. 5.

Fig. 4 - With our Tail Tidy wiring just connect **GREY/BROWN** e **BLACK/WHITE** using the press clips.

Fig. 5 - Connect the cables **BLUE-BROWN/BROWN** e **BROWN/WHITE** using fast connectors.

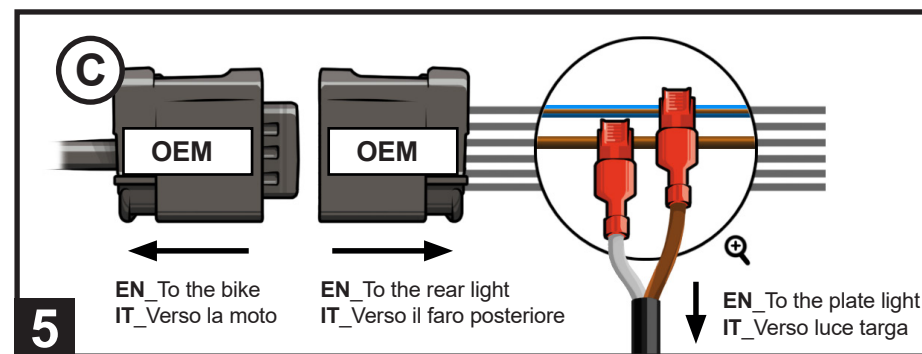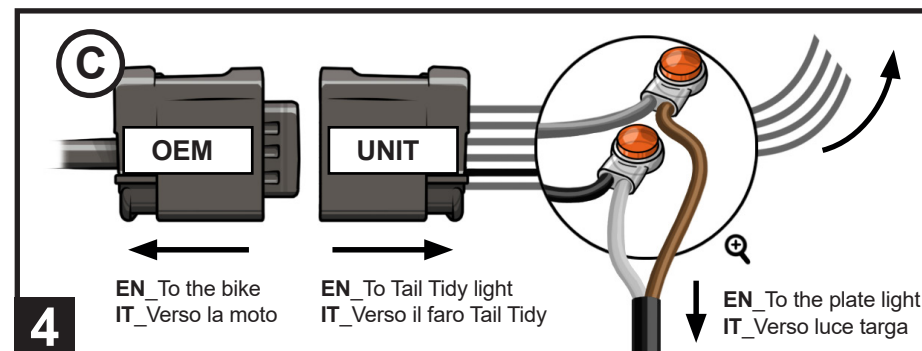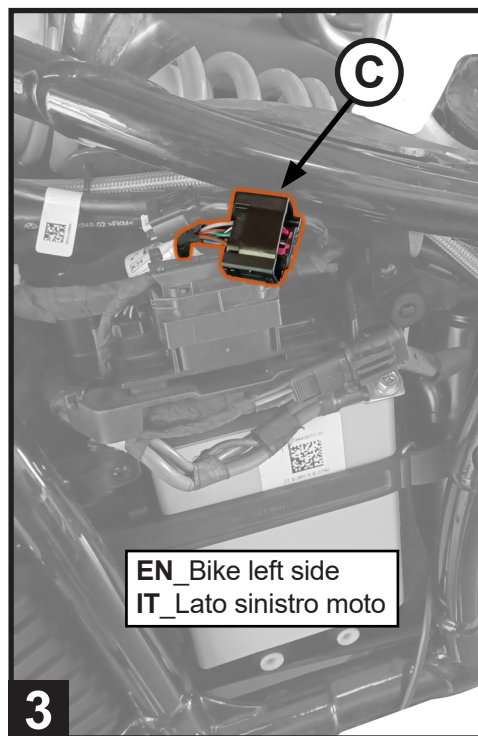

IT_Inserire la luce targa nella staffa come mostrato in fig. 1, passando il cavo nel foro centrale, poi fissarlo utilizzando due dadi ciechi forniti nel kit. Rimuovere le viti A e B che sostengono la pinza del freno, e utilizzarle per fissare la staffa alla moto; poi passare il cavo della luce targa lungo il tubo del l'olio freni e fissarlo ad esso con delle fascette.

In fig. 3 è indicato lo spinotto di alimentazione (C). Utilizzare i rubacorrente in dotazione per connettere i cavi **GRIGIO** e **NERO** provenienti dalla luce targa, con il cablaggio della moto (connettere i rubacorrente lontano dallo spinotto).

Se la vostra moto monta il **Kit Tail Tidy**, seguire fig. 4, se invece è originale seguire fig. 5.

Fig. 4 - Nel nostro cablaggio **Tail Tidy** vi sono due cavi da connettere **GRIGIO/MARRONE** e **NERO/BIANCO** usando le clip a pressione.

Fig. 5 - Connettere i cavi **BLU-MARRONE/MARRONE** e **MARRONE/BIANCO** usando i rubacorrente.